


⊕ CONNECTION
 SPACING AS REQ'D BY DESIGN
 SUGGESTED SPACING 8'-0"

PLAN

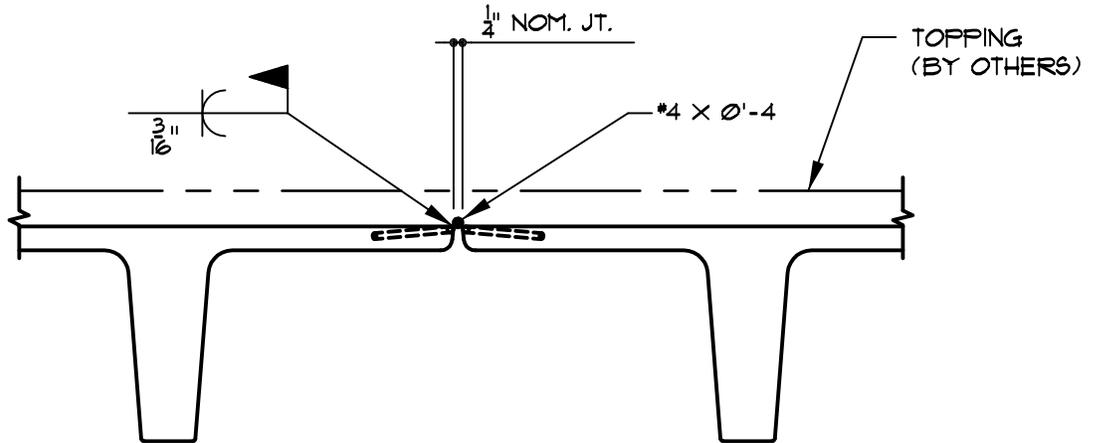

SECTION

NOTES:

1. SHEAR TIES ARE NOT TO BE USED FOR ADJUSTING DIFFERENTIAL CAMBER BETWEEN ADJACENT SLABS. TO ACCOMPLISH THIS, BEARING MUST BE SHIMMED.
2. TYPICALLY A TIE SHOULD BE MADE NO FARTHER THAN 4'-0" FROM TEE ENDS. FOR CANTILEVERS, TIES SHOULD BE LOCATED ABOUT 1'-3" FROM ENDS TO HELP MAINTAIN ALIGNMENT OF SLABS.
3. LATERAL DIAPHRAGM FORCES ARE TYPICALLY TRANSFERRED ENTIRELY BY TOPPING SLAB REINFORCING. FLANGE TIES ARE FOR ERECTION STABILITY ONLY.

ISSUED MAY 2015

REVISED

TEE FLANGE TIES

DT-1